


EXPLODED VIEW, PARTS AND PRICE LIST
Models .177 Cal. 38T and C

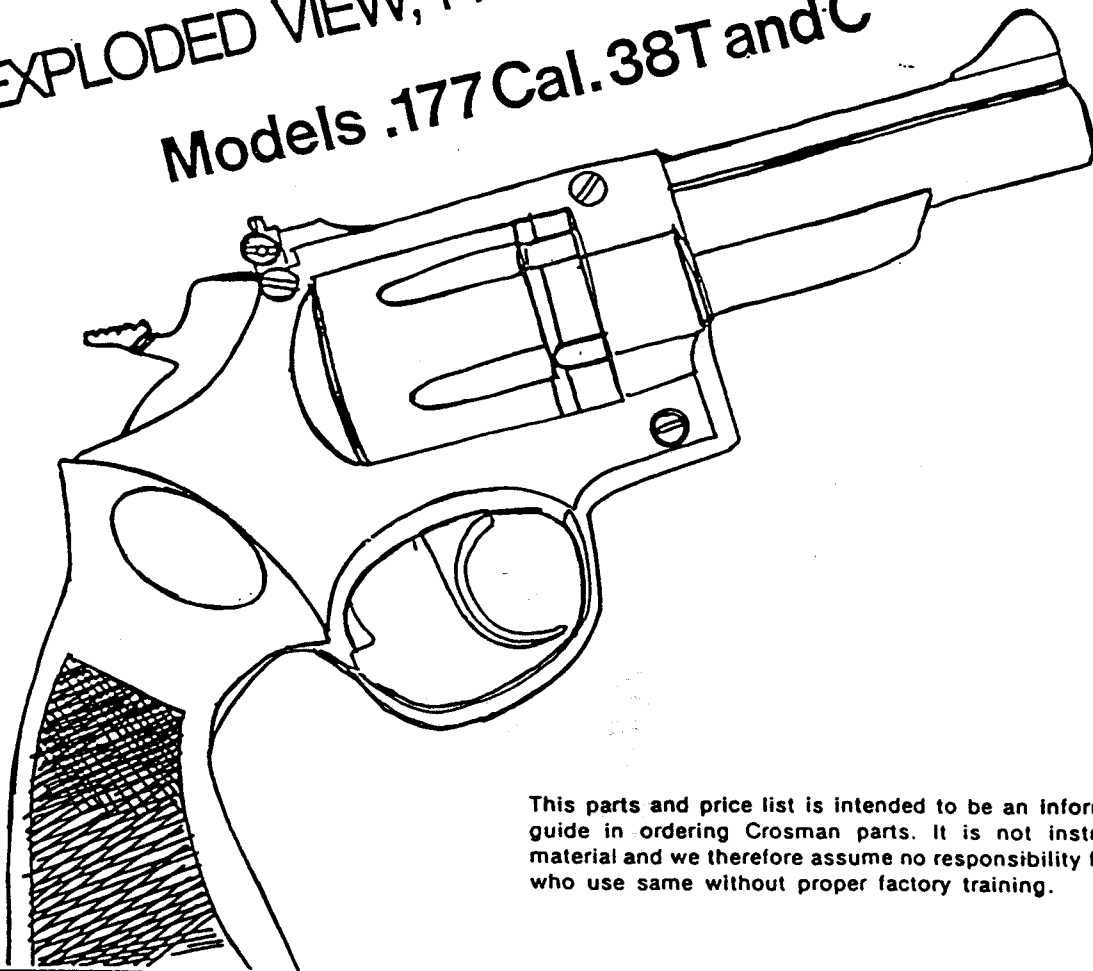

This parts and price list is intended to be an informational guide in ordering Crosman parts. It is not instructional material and we therefore assume no responsibility for those who use same without proper factory training.

.177 Cal.


ASSEMBLY PROCEDURES

Valve Assembly

1. Place "O" Ring 38-130 into Valve Body 38A009. Valve Washer 38-095 is then placed in Valve Body 38B009 flat side down.
2. Place Spacer 38-022 in Valve Body 38B009 and press around edge with screwdriver to properly seat "O" Ring 38-130.
3. Valve Spring 38B078 is then placed in Valve Body 38B009. Wide end first.
4. Lubricate Valve Stem 38A018 w/Pell Gun Oil.
5. Place Valve Seal 38-094, Lubricate "O" Ring 140-058 and Valve Seat 38-091 on Valve Stem 38A018. Insert entire unit into Valve Body 38B009 with thumb and forefinger holding all parts firmly against Valve Seat 38-091. Continue to apply pressure on Valve Seat 38-091 and place Valve Seat Wrench T-38-11 over end of Valve Stem 38A018 to tighten seat. NOTE: Tighten until finger tight only.

Piercing Assembly

1. Place Washer 38-051 into Valve Body 38B009.
2. Assemble Gland Gasket 38-017 and Tube Seal 38-065. Lubricate area around Gland Gasket 38-017 and place in Valve Body 38B009.
3. Place Piercing Screen 38-028, Piercing Pin 38A027 into Piercing Block 38-026. Lubricate End Seal 38-128 before inserting in Piercing Block. Place Guide Collar 500-064 over End Seal 38-128. Guide Collar 500-064 should be turned down until snug. Beyond this point the center of End Seal 38-128 will be forced open, causing a leak. Now place entire Piercing Assembly 38-056 onto Tube Assembly 38-056. NOTE: Lubricate Tube Seal 38-065 before putting Piercing Assembly 38-056 and Tube Assembly 38-056 together.

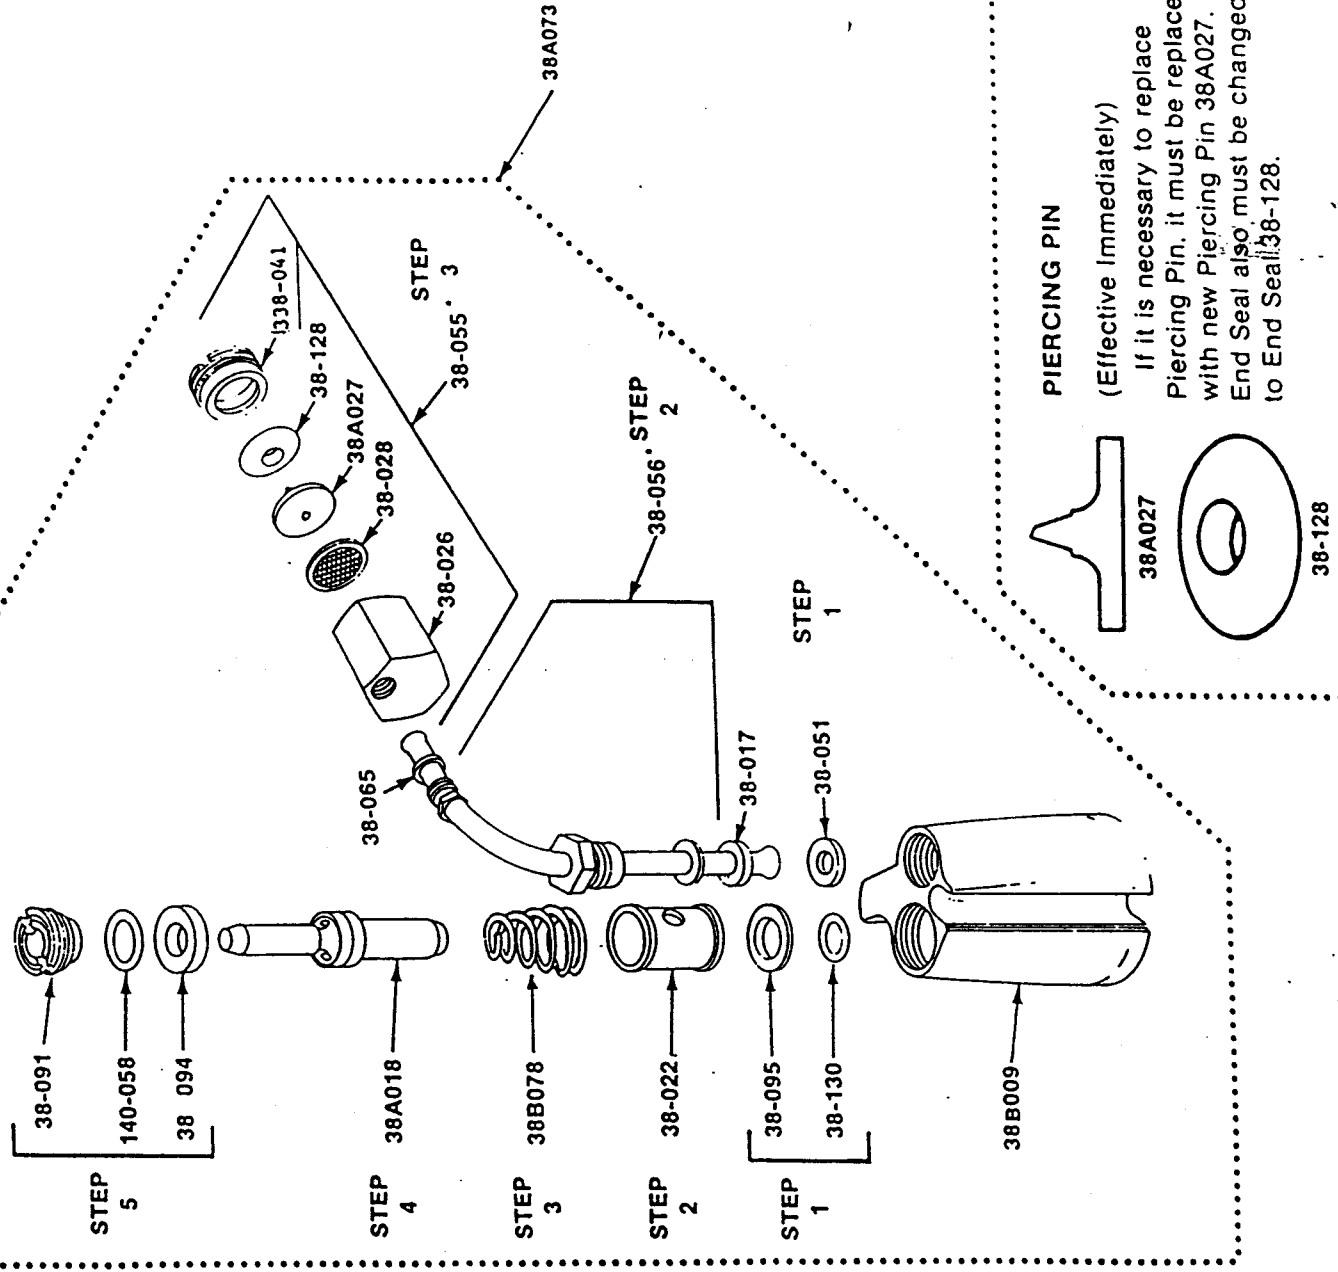

PIERCING PIN

(Effective Immediately)

If it is necessary to replace Piercing Pin, it must be replaced with new Piercing Pin 38A027. The End Seal also must be changed to End Seal 38-128.



38A027



38-128

MODELS 38C & T (.177 Cal.) ASSEMBLIES D PARTS LIST

PRICE

| PART NO. | QTY. | DESCRIPTION | PRICE | PART NO. | QTY. | DESCRIPTION | PRICE |
|----------|------|-------------------------------|-------|----------|------|---------------------------------|-------|
| 38A002 | 1 | Barrel Housing(Short) | | 38-089 | 1 | Guide | |
| 38A003 | 1 | Barrel (Short) | | 38-091 | 1 | Valve Seat | |
| 38B009 | 1 | Valve Body | | 38-094 | 1 | Valve Seal | |
| 38-017 | 1 | Gland Gasket | | 38-095 | 1 | Valve Washer | |
| 38A018 | 1 | Valve Stem | | 38A102 | 1 | Safety Link | |
| 38-019 | 1 | Roller(Use with 38C124 Frame) | | 38B104 | 1 | Spring Pivot | |
| 38-021 | 1 | Hammer Pawl | | 38-106* | 1 | Hammer Assembly | |
| 38-022 | 1 | Spacer | | 38A107 | 1 | Cylinder(Use with 38B124 Fram | |
| 38-026 | 1 | Piercing Block | | 38B107 | 1 | Cylinder(Use with 38C124 Fram | |
| 38A027 | 1 | Piercing Pin | | 38-114* | 1 | Rear Sight Assembly | |
| 38-028 | 1 | Piercing Screen | | 38-116 | 1 | Cover Sold only as Assembly | |
| 38B034 | 1 | Trigger | | 38-117 | 5 | Frame Screw | |
| 38B038 | 1 | Hammer Spring | | 38-123 | 1 | Elevation Screw | |
| 38-039 | 2 | Sear Spring | | 38B124 | 1 | Frame Assembly | |
| 38-040 | 1 | Sear | | 38C124 | 1 | Frame Assembly | |
| 38A042 | 1 | Loader | | 38-125 | 1 | Roller | |
| 38C045 | 1 | Powerlet Screw | | 38-126 | 1 | Trigger Spring | |
| 38-050 | 1 | Barrel Screw | | 38-127 | 1 | Shaft(Use with 38B124 Frame | |
| 38-051 | 1 | Washer | | 38B127 | 1 | Shaft(Use with 38C124 Frame) | |
| 38A054* | 1 | Lever Assembly | | 38-128 | 1 | End Seal | |
| 38-055* | 1 | Piercing Assembly | | 38-129 | 1 | Trigger Pin | |
| 38-056* | 1 | Tube Assembly | | 38-130 | 1 | O'Ring | |
| 38A061 | 1 | Grip,R.H. | | 38-131 | 1 | Screw Tip | |
| 38-064 | 1 | Ball | | 38A200 | 1 | Barrel Housing-Long | |
| 38-065 | 1 | Tube Seal | | 38A300 | 1 | Barrel - Long | |
| 38A071 | 1 | L.H. Grip Assembly | | 36A027 | 1 | Elevation Spring | |
| 38A073 | 1 | Valve & Piercing Assembly | | 105-054 | 2 | Grip Screw | |
| 38B078 | 1 | Valve Spring | | 140-013 | 1 | Screw | |
| 38A079 | 1 | Pell Removal Rod | | 140-058 | 1 | No. 6 O-Ring | |
| 38-081 | 1 | Guide Pin | | 150-013 | 1 | Screw | |
| 38A083 | 1 | Loader Spring | | 338-041 | 1 | Guide Collar | |
| | | | | 500-064 | 1 | Guide Collar Repaced by 338-041 | |
| | | | | 600-079 | 1 | Decent Spring | |

without notice. Check or money order in amount of total purchase must accompany parts order. Order by part number and description. Prices subject to change

TO BE USED AS REFERENCE GUIDE ONLY